



Removal

- 1 Unlock sun roof lid and take end lever out of recess.
- 2 After opening sun roof lid three fourths of the way, unclip sun roof headliner at front and pull it out upward.

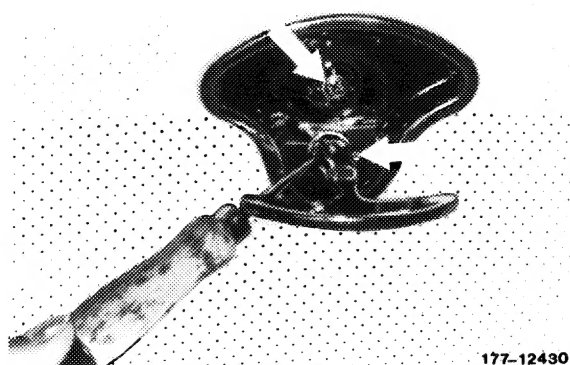

- 3 Open sun roof lid all the way and remove left and right sliding rails.
- 4 Lift off sun roof lid.

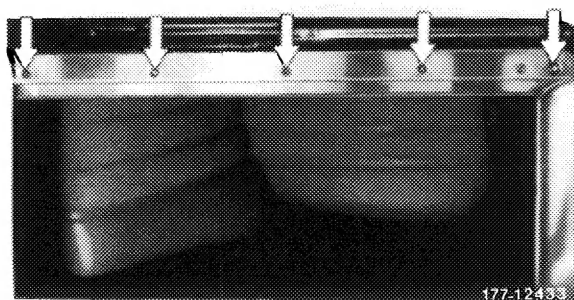

Installation

- 5 Before installation, lubricate all slides as well as sliding rails up to their rear ends thoroughly with MB slide paste using a piece of felt or brush attached to an extension.
- 6 Guide in sun roof lid from above and install sliding rails.
- 7 Continue installation in reverse sequence of removal.